INSTRUMENT LAB COPY

Instruction Manual

[redacted]

FLUKE®

JOHN FLUKE mfg. co., inc.
SEATTLE, WASHINGTON

139

JOHN FLUKE MFG. CO., INC.
P. O. Box 7428
Seattle, Washington 98133

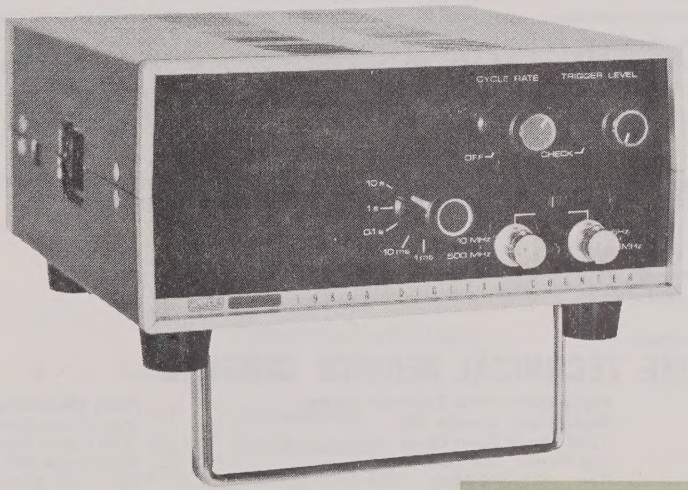

MODEL

1980A

TELECOMMUNICATIONS FREQUENCY COUNTER

WARRANTY

The JOHN FLUKE MFG. CO., INC.* warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operations, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken:

1. Notify the John Fluke Mfg. Co., Inc.,* giving full details of the difficulty, and include the Model number, type number, and serial number On receipt of this information, service data or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate of the charges will be made before the work begins, provided the instrument is not covered by the Warranty.

"The foregoing warranty is in lieu of all other warranties, express or implied, including but not limited to, any implied warranty of merchantability, fitness or adequacy for any particular purpose or use. Fluke shall not be liable for any special, incidental or consequential damages."

SHIPPING

All shipments of John Fluke Mfg. Co., Inc.* instruments should be made via **Railway Express**** prepaid. The instrument should be shipped in the original packing carton, or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc.* Upon receipt of this report, you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc.* will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to: JOHN FLUKE MFG. CO., INC., P. O. Box 7428, SEATTLE, WASHINGTON 98133*.

* For European customers: FLUKE (Nederland) B.V.
Ledeboerstraat 27
Tilburg, Netherlands

**For European customers, Air Freight prepaid.

FLUKE TECHNICAL SERVICE CENTERS

John Fluke Mfg. Co., Inc.
Bill Fetrow, Supervisor
7001 - 220th S.W.
Mountlake Terrace, WA 98043
Tel: 206-774-2206
TWX: 910-449-2850

Fluke Western Technical Center
Mike Nagy, Service Mgr.
1109 South Central Avenue
Glendale, CA 91204
Tel: 213-245-6716
TWX: 910-497-2086

Fluke Western Technical Center
Gary Priebe, Service Mgr.
4805 Mercury St.
San Diego, CA 92111
Tel: 714-565-4455
TWX: 910-337-1273

Fluke Western Technical Center
Howard McElroy, Service Mgr.
2359 De La Cruz Blvd.
Santa Clara, CA 95050
Tel: 408-244-1505
TWX: 910-338-0121

Fluke Midwestern Technical Center
Bruce Hunt, Service Mgr.
1287 North Rand Road
Des Plaines, ILL 60016
Tel: 312-298-7470
TWX: 910-233-4978

Fluke Canadian Technical Center
Herb Duval, Service Mgr.
6427 Northam Drive
Mississauga, Ontario
Tel: 416-678-1500
TWX: 610-492-2119

Fluke Eastern Technical Center
Bernard Ciongoli, Service Mgr.
101 Berkshire Ave.
Paterson, N.J. 07502
Tel: 201-742-3215

Fluke N. E. Technical Center
Dick Zemba, Service Mgr.
109 Massachusetts Avenue
Lexington, Massachusetts 02173
Tel: 617-861-8620
TWX 710-326-1715

Fluke Mideastern Technical Center
John Hines, Service Mgr.
11501 Huff Court
Kensington, MD 20795
Tel: 301-881-5300
TWX: 710-825-9645

Fluke S.E. Technical Center
Jesse Morse, Service Mgr.
P.O. Box 6578
940 North Fern Creek Avenue
Orlando, FLA 32803
Tel: 305-896-2296
TWX: 810-850-0185

Fluke S. E. Technical Center
Dwain Cox, Service Mgr.
P.O. Box 9619
1310 Beaman Place
Greensboro, N.C. 27408
Tel: 919-273-1918
TWX: 510-925-1173

FLUKE AUTHORIZED SERVICE LABS

Ball Brothers
Boulder Industrial Park
P.O. Box 1062
Boulder, CO 80302
Tel: 303-441-4710
TWX: 910-940-3241

Service Engineers
Larry Flood, Service Mgr.
28 Finney Street
Rochester, N.Y. 14605
Tel: 716-232-2800

Missouri Research Lab
630 Haines, NW
Albuquerque, NM 87102
Tel: 505-243-6772
TWX: 910-989-1656

Linear Standards Lab
8207 Millet
Houston, TX 77012
Tel: 713-923-2796
TWX: None

Tucker Electronics
Clay Aclin, Service Mgr.
1717 Jupiter
Garland, TX 75040
Tel: 214-348-8800
TLX: 73-0401

Rev. 8/73

TABLE OF CONTENTS

SECTION	TITLE	PAGE
1	**INTRODUCTION AND SPECIFICATIONS**	1-1
	1-1. Introduction	1-1
	1-5. Specifications	1-1
2	**OPERATING INSTRUCTIONS**	2-1
	2-1. Introduction	2-1
	2-3. Shipping Information	2-1
	2-6. Input Power Requirements	2-1
	2-8. Operating Notes	2-1
3	**THEORY OF OPERATION**	3-1
	3-1. Introduction	3-1
	3-3. General	3-1
	3-8. Input Circuitry	3-1
	3-15. Timebase Oscillator	3-3
	3-17. Divide by 1000	3-3
	3-19. Program Logic	3-3
	3-23. Count and Display Logic	3-5
4	**MAINTENANCE**	4-1
	4-1. Introduction	4-1
	4-3. Test Equipment	4-1
	4-5. Performance Test	4-1
	4-7. Timebase Adjust	4-2

LIST OF ILLUSTRATIONS

FIGURE	TITLE	PAGE
3-1	Model 1980A Block Diagram	3-2
3-2	Direct Channel Preamplifier	3-2
3-3	Prescaler	3-4
3-4	Input Selection Gate	3-4
3-5	Timebase Oscillator	3-4
3-6	Program Logic	3-6
3-7	Program Logic Timing	3-7
3-8	Count and Display Logic	3-8
3-9	Count and Display IC Internal Configuration	3-8

LIST OF TABLES

TABLE	TITLE	PAGE
2-1	Control and Indicator Functions	2-1

Section 1
INTRODUCTION & SPECIFICATIONS

1-1. INTRODUCTION

1-2. The Model 1980A Telecommunications Frequency Counter is a compact, highly portable, lightweight counter with "Big Counter" features. The 1980A has a full 6 digit LED display, cycle rate and trigger level controls, trigger level status indication, gate time selection, and an overflow indicator that warns when the count has exceeded the last decade of the display.

1-3. The 1980A has two selectable input jacks. A high impedance (1MΩ) input, covering a frequency range from 5Hz to 50 MHz with 50 mV input sensitivity; and a second, 50Ω input, having a frequency range of 25 MHz to 515 MHz with 50 mV input sensitivity. A self check position on the trigger level control provides a 1 MHz signal from the reference oscillator for checking the display and logic circuitry.

1-4. An optional time base oscillator allows the instrument to be tailored to the stability requirements of the user. A snap on battery pack is also available, making the 1980A highly desirable for field applications. The battery pack has built in protection circuits that prevent the nickel-cadmium battery from being damaged by either excessive discharging or overcharging.

1-5. SPECIFICATIONS

FREQUENCY RANGE	5Hz to 50 MHz (direct input) 25 MHz to 515 MHz (prescaled input)
INPUT SENSITIVITY	Sinewave 50 mV rms over entire frequency range of 5 Hz to 50 MHz 50 mV rms from 25 MHz to 515 MHz (prescaled input)
INPUT IMPEDANCE	1M shunted with 20 pF (direct input) 50 ohms, nominal (prescaled input)
OVERLOAD CAPABILITY	150V rms up to 1 kHz decreasing to 5V rms at 50 MHz (direct input) dc + peak must not exceed 250V 5V rms (prescaled input)
GATE TIMES	1 ms to 10s in 5 decade steps
ACCURACY	±1 count + timebase accuracy
CYCLE RATE	Variable between 0.2 and 2.0 seconds
READOUT	6 digit LED display, 0.27" character height. Measurement units and decimal point automatically indicated

TIMEBASES	STANDARD	OPTION –04
Aging Rate (constant temp.)	3×10^{-7}/mo	3×10^{-7}/mo
Short Term Stability (rms over 1 sec)	5×10^{-8}	2×10^{-8}

1980A MANUAL Pg. 2

TIMEBASES	STANDARD	OPTION –04
Temp. Dependence		
20°C to 30°C	5×10^{-7}	1×10^{-7}
0°C to 50°C	2×10^{-6}	3×10^{-7}
–20°C to 60°C	–	5×10^{-7}
Line Voltage Dependence (±10% Change)	5×10^{-8}	2×10^{-8}
STORAGE TEMPERATURE	–40 to +75°C	
OPERATING TEMPERATURE	0°C to +50°C (standard timebase) –20°C to +60°C (optional timebase)	
POWER REQUIREMENTS	115/230V rms ± 10% (switchable), 50 to 60 Hz 11.5V dc to 14V dc (with cable) (100V operation available)	
BATTERY LIFE	4.0 hours when using direct input 3.3 hours when using prescaled input	
SIZE		With Battery Option
	2-7/8" High 6-3/8" Wide 6-3/4" Deep	2-7/8" High 6-3/8" Wide 12-1/4" Deep
WEIGHT	4-3/4 Pounds	10-1/2 Pounds

Section 2
OPERATING INSTRUCTIONS

2-1. INTRODUCTION

2-2. This section contains operating instructions for the proper use of the Model 1980A. It is recommended that the contents of this section be thoroughly read and understood before any attempt is made to operate this instrument. Should any difficulties be encountered, please contact your nearest John Fluke Sales Representative or the John Fluke Mfg. Co., Inc., P.O. Box 7428, Seattle, Washington 98133, telephone (206) 774-2211. A list of Sales Representatives is located at the rear of this manual.

2-3. SHIPPING INFORMATION

2-4. The Model 1980A was packaged and shipped in a foam packed cardboard carton. After unpacking the unit a thorough inspection should be performed to reveal any damage that may have occurred in transit.

2-5. If reshipment is necessary, the Model 1980A should be repackaged in the original container. If the original container is not available, a new one can be obtained from the John Fluke Mfg. Co., Inc. Please reference the Model number (Model 1980A) when requesting a new shipping container.

2-6. INPUT POWER REQUIREMENTS

2-7. This frequency counter may be operated from either 105 to 125V rms or 210 to 250V rms, 50 to 60Hz line power. A side switch, located on the left side of the unit, selects either the 115 or 230 volt line power requirement.

2-8. OPERATING NOTES

2-9. Control and Indicator Location and Function

2-10. The location, by reference number, of the controls and indicators is shown in Figure 2-1. The name and function of each control or indicator is listed by reference number in Table 2-1.

Table 2-1. CONTROL AND INDICATOR FUNCTIONS

REF NO	NAME	FUNCTION
1	TRIGGER LEVEL	determines the minimum input signal level required to cause the buffer amplifier to conduct. The extreme CCW position switches the Model 1980A to the "self CHECK" mode

Continued on page 2-3

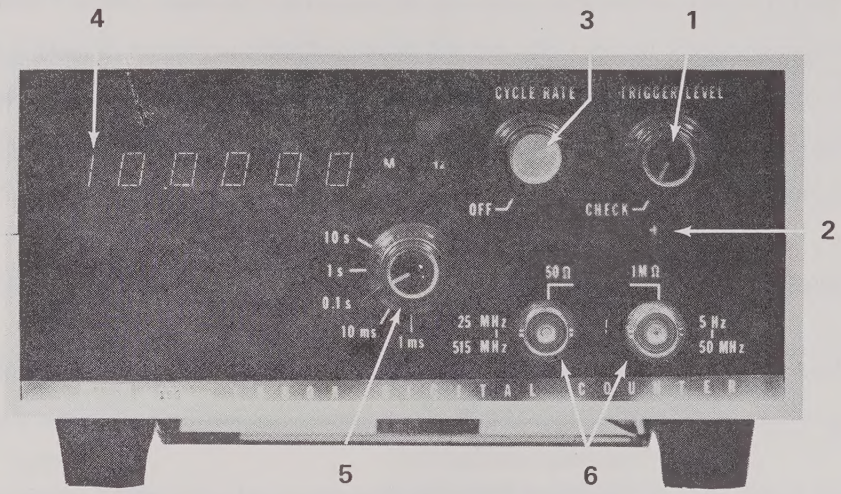
4
3
1
CYCLE RATE
TRIGGER LEVEL
OFF
CHECK
2
10 s
1 s
0.1 s
10 ms
1 ms
50 Ω
1 MΩ
25 MHz
515 MHz
5 Hz
50 MHz
5
6

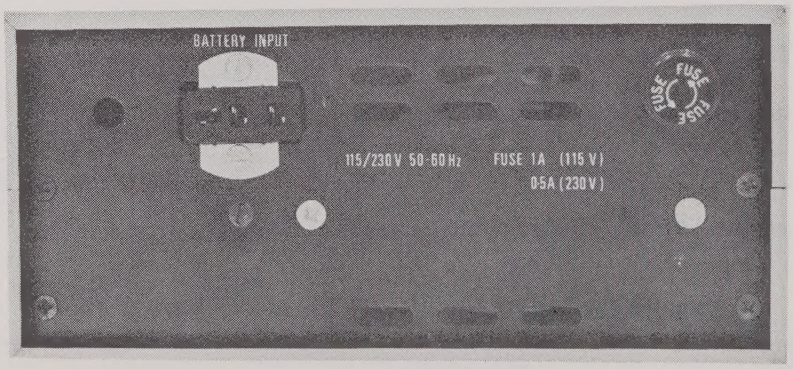
BATTERY INPUT
115/230 V 50-60 Hz
FUSE 1A (115 V)
0.5A (230 V)
FUSE
FUSE

Table 2-1. CONTROL AND INDICATOR FUNCTION (con't)

REF NO	NAME	FUNCTION
2	"+" and "—" INDICATORS	show the status of the input signal level in relationship to the trigger level threshold. The "+" indicator is energized when the instantanious input voltage is above the threshold and "—" indicator energizes when the input level is below the threshold.
3	CYCLE RATE CONTROL	selects a time interval between measurements of 0.2 seconds (fully CW) to 2 seconds. The fully CCW position turns the unit off.
4	OVERFLOW INDICATOR	is illuminated when the input count exceeds the 1980A display capacity.
5	GATE TIME SELECTOR	may be set to one of five gate times: 1ms, 10ms, 0.1s, 1s or 10s.
6	INPUT JACKS	provide for either direct or prescaled inputs. A slide switch selects either prescaled 50Ω, 25 MHz to 515 MHz input or direct 1 MΩ, 5Hz to 50 MHz input.

2-11. Digital Counter Operation

2-12. SELF CHECK

2-13. It is important to note, this is a check of logic functions only, and does not indicate that the timebase oscillator is set exactly on frequency.

a.	Turn the instrument on.	Rotate the CYCLE RATE control CW just out of the OFF detent position.
b.	Set the CYCLE RATE.	Set the CYCLE RATE control fully CW.
c.	Set the gate time.	Set the gate time control to 1ms.
d.	Set the TRIGGER LEVEL.	Turn the TRIGGER LEVEL control fully CCW to the CHECK position.
e.	Select DIRECT INPUT.	Move the input slide switch to the right.
f.	Note the display.	The front panel display should indicate 1.000 MHz
g.	Select PRESCALE INPUT	Move the input slide switch to the left
h.	Note the display.	The front panel display should indicate 10.00 MHz
i.	Higher resolution.	Selecting longer gate times of 10ms, 0.1s, 1s or 10s will increase the displayed resolution of the 10 MHz indication.

2-14. MEASURING INPUT SIGNALS

2-15. The Model 1980A has selectable inputs that provide for two separate, but overlapping, frequency ranges. A DIRECT, 1 megohm, input (right input jack) for frequencies from 5 Hz to 50 MHz is selected by positioning the slide switch to the right. The second input (left input jack) is PRESCALED to provide for frequencies of 25 MHz to 515 MHz at 50 ohms input impedance, and is selected when the slide switch is positioned to the left. The two inputs will be referred to as either DIRECT or PRESCALED and discussed separately in the following procedures.

2-16. Direct Input

2-17. A shielded (coax) cable should be used to connect signals to the direct (right) input jack, to minimize pickup of spurious noise.

CAUTION!

Do not exceed the maximum input voltage levels indicated in the SPECIFICATIONS paragraphs of SECION 1 in this manual.

a.	Line Power	Check the position of the Line Voltage select switch, then connect the counter to a corresponding AC power source.
b.	Turn the Instrument On	Rotate the CYCLE RATE control CW just out of the OFF detent position.
c.	Set the TRIGGER LEVEL	Adjust the TRIGGER LEVEL control until the "+" and "–" trigger status indicators are illuminated equally.
d.	Set the CYCLE RATE	Turn the CYCLE RATE control CW to any position that updates the display at a desirable rate.
e.	Set the gate time.	Set the gate time control to 1 ms.

NOTE!

At this time the counter display should be indicating the input frequency in MHz. If the input frequency is less than 500 Hz the display will show .000 MHz, and possibly flash a 1 in the Least Significant Digit.

f.	Higher Resolution	Set the gate time control to 10 ms. The least significant digit, indicates hundreds of Hz. As the gate time increases the decimal value of the least significant digit decreases.

2-18. The value of any frequency up to 50 MHz can be resolved to 0.1 Hz. For example, say you want to measure a 48,634,264.3 Hz signal. In the 10 ms gate time the display would indicate 48.6342 MHz. When the gate time is increased to 0.1s the display now indicates 8634.26 kHz, and the 0F lamp is energized indicating the input count has exceeded the display capacity. From the display shown in the 10 ms gate time, you know that the Over Flow digit is a "4". For each additional step increase in gate time the most significant digit of the previous display will go into Over Flow, and a new least significant digit will appear. Finally, at the 10s gate time the display will show 34.2643 kHz and the 4, 8 and 6 digits will be the Over Flow.

2-19. Prescaled Input

2-20. When measuring frequencies from 50 MHz to 515 MHz the signal must be applied to the prescaled (left) input jack and the slide switch positioned to the left. Use a shielded (coax) cable to minimize pickup of spurious noise.

a.	Line Power	Check the position of the input power select switch, then connect the counter to a corresponding AC power source.
b.	Turn the Instrument On	Rotate the CYCLE RATE control CW just out of the OFF detent position.

NOTE!

The TRIGGER LEVEL control has no effect on the prescaled input, but the self CHECK feature is still operative and will display 10.00 MHz when selected.

c.	Set the CYCLE RATE	Turn the CYCLE RATE control CW to any position that updates the display at a desirable rate.
d.	Set the gate time	Set the gate time control to 1 ms
e.	Higher Resolution	Rotate the gate time control CW one step at a time until the Over Flow light comes on, then back (CCW) one step. This is the highest resolution in which the most significant digit of the input frequency, will be displayed.

2-21. When using the prescaled input, the frequency of input signals from 25 MHz to 515 MHz can be resolved to 1 Hz. The resolved value of the input frequency is obtained by combining the digits to the left of the decimal, in the 1 ms gate time, with the digits to the right of the decimal in the 10s gate time. The resulting number is equal to the input frequency expressed in MHz.

Section 3
THEORY OF OPERATION

3-1. INTRODUCTION

3-2. This section describes the theory of operation of the Model 1980A Telecommunications Frequency Counter. In the general discussion, the functional interaction of circuits as shown on the accompanying block diagrams will be examined. Component references and signal designations, which appear on the simplified diagrams, correspond to those on the schematics at the rear of this manual.

3-3. GENERAL

3-4. Unit Description

3-5. Figure 3-1 shows a basic block diagram of the Model 1980A counter. The input signal is amplified and shaped into TTL-compatible square waves by either the direct channel preamplifier or the prescaler. This shaped square wave is then applied to one input of the main gate.

3-6. The 10 MHz Clock Oscillator output is digitally divided to give a 1 MHz Self-Check frequency and a 10 kHz program logic base frequency. The Program Logic again divides the 10 kHz signal into five, selectable, gate times. Dependent upon the position of the gate time and cycle rate controls, the Program Logic generates precisely timed signals for the main gate, reset and update function.

3-7. The main gate is enabled for the duration of the gate time signal, which allows the input count to pulse through the main gate to the input of the Count & Display Logic. The input count is then displayed in MHz or kHz as directed by the input and gate time controls.

3-8. INPUT CIRCUITRY

3-9. Direct Channel Preamplifier

3-10. The 5Hz to 50 MHz Direct Channel Preamplifier diagram is shown in Figure 3-2. Input protection is provided by R1, R2, CR1 and CR2 for input levels to 150V rms. The input signal is then buffered by the high input impedance unity gain stage Q1 and Q2. The buffer section is capacitively coupled to the Amplifier, Schmitt Trigger IC where the signal is amplified and formed into a square wave. The square wave is then translated to TTL levels by Q3.

3-11. Prescaler

3-12. A block diagram of the prescaler is shown in Figure 3-3. The signal from the prescale input jack is fed to the hybrid preamp via a 1/10 amp fast-acting fuse, for overload protection. The hybrid preamp provides a saturated output

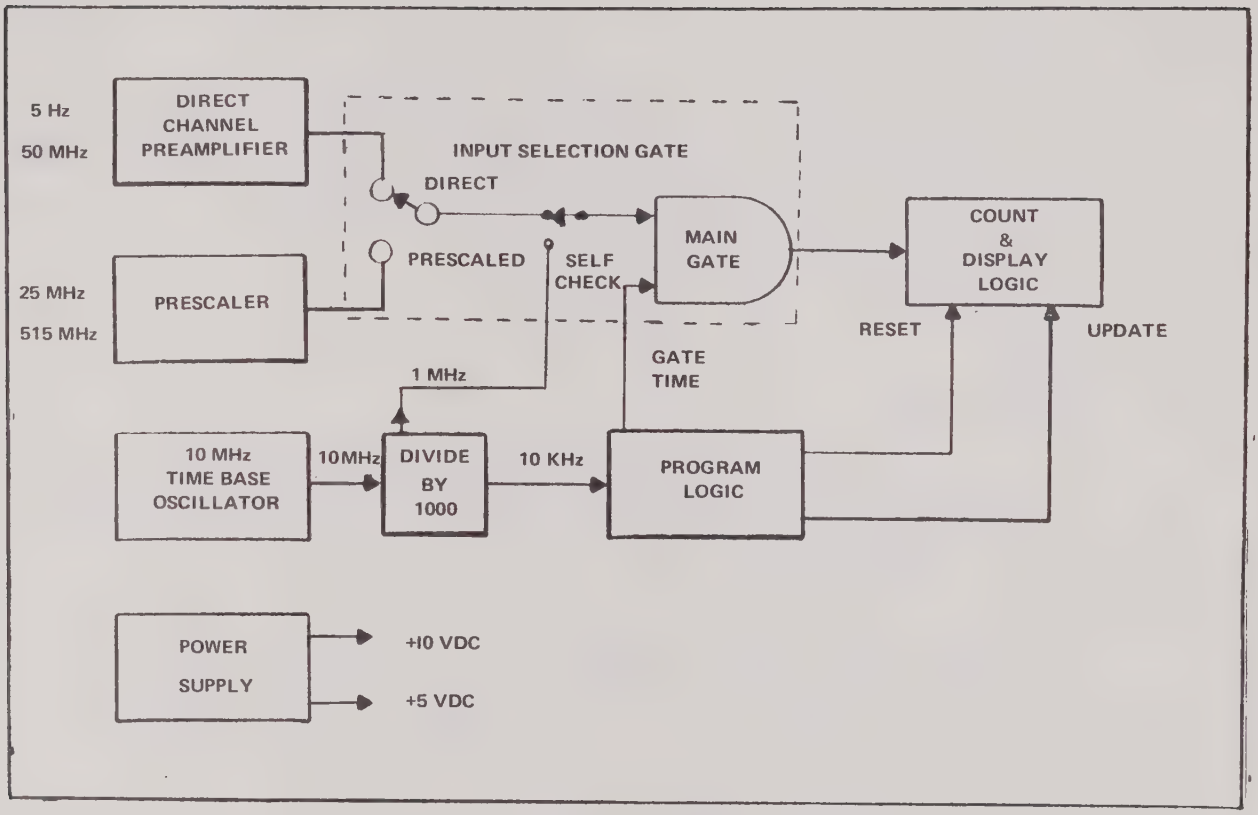

Figure 3-1. MODEL 1980A BLOCK DIAGRAM

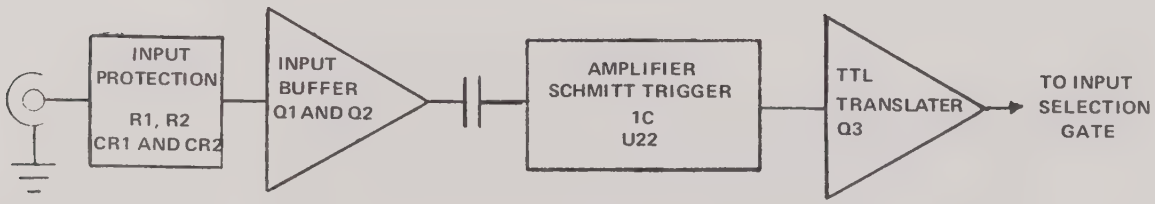

Figure 3-2. DIRECT CHANNEL PREAMPLIFIER

signal to drive the ECL divide by 10 counter. One ECL square wave is produced for each ten cycles of input frequency. The ECL square wave output is converted to TTL square wave signals by the ECL to TTL square wave converter circuitry. This TTL signal is then applied to the input selection gate.

3-13. Input Selection Gate

3-14. The Input Selection Gate (Figure 3-4) consists of four, two input, NAND gates and switches S2 and S3. The function of the Input Selection Gate is to apply one of three signals (direct input, prescaled input, or 1 MHz self check) to the Count and Display Logic. When slide switch S2 is in the Direct position, the Direct Channel Preamp output is gated to the Count and Display Logic for the duration of the gate time. With S2 in the Prescale position the Prescaler output is gated to the Count and Display Logic. The 1 MHz self check signal is used to check for the proper operation of the Count and Display Logic. The self check position of S3 applies this signal to the Count and Display Logic.

3-15. Timebase Oscillator

3-16. The 10 MHz timebase signal is generated by a modularly constructed, temperature-compensated oscillator package. Figure 3-5 shows the TCXO capacitively coupled to a buffer amplifier that will amplify and shape the 10 MHz signal for use in the Divide by 1000 circuit.

3-17. Divide by 1000

3-18. The 10 MHz timebase signal is connected to the input gate of the first of three TTL high-speed decade counters. Each of the three counters divides its input by a factor of ten. At the output of the first stage the 1MHz signal, in addition to feeding the second stage, is used as the 1 MHz self check signal. The output of the second stage, 100 kHz, is applied to the input of the third stage where it is divided to produce the 10 kHz Program Logic base frequency.

3-19. Program Logic

3-20. The purpose of the Program Logic is to provide a precise signal to open the main gate, for an exact time period (gate time), then close it. In addition to gate times the Program Logic developes variable cycle rate, and reset (R) and update (M) signals.

3-21. The gate time signals are derived from the 10 kHz Program Logic base frequency by dividing it by a factor of ten in each of five, series connected, TTL high-speed decade counters. A simplified diagram of the Program Logic is shown in Figure 3-6. Each consecutive counter output determines one gate time, 1 ms from the first counter, 10 ms from the second 100 ms - third, 1s - fourth, and 10s for the fifth.

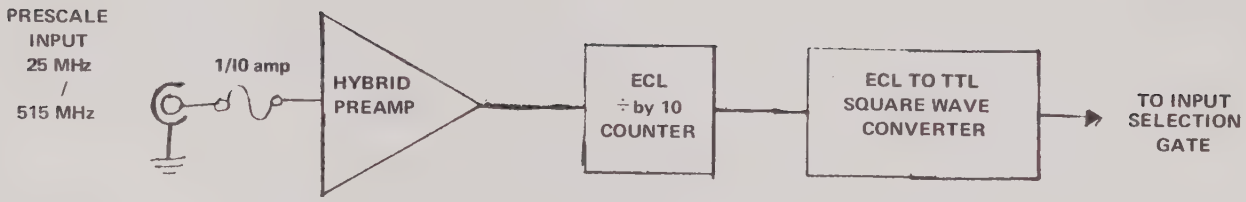

Figure 3-3. PRESCALER

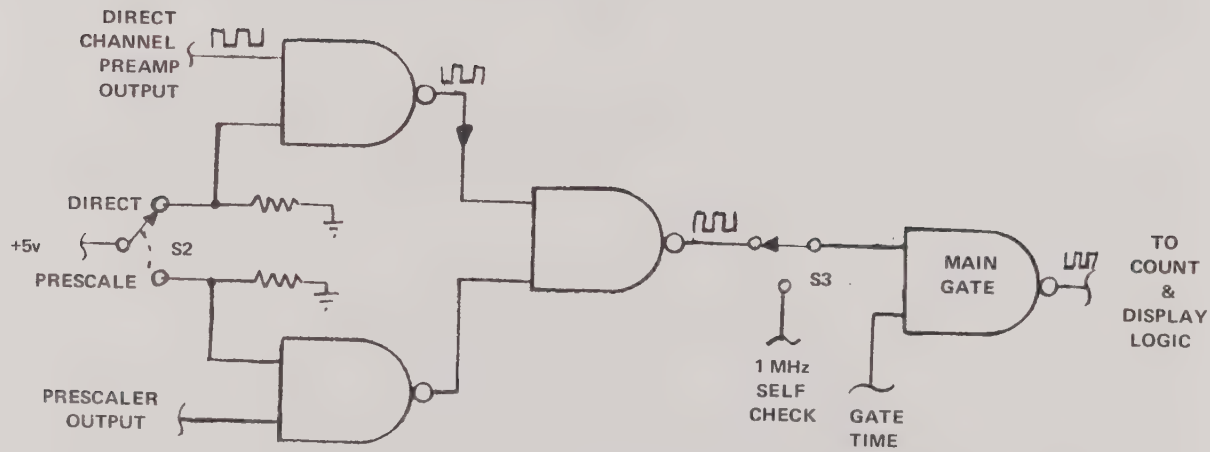

Figure 3-4. INPUT SELECTION GATE

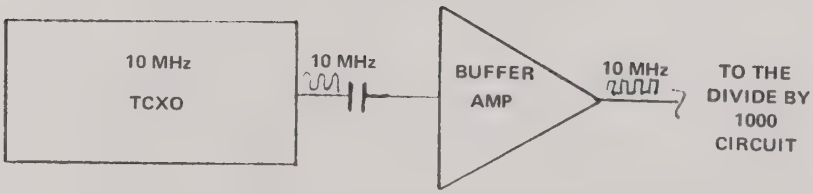

Figure 3-5. TIMEBASE OSCILLATOR

3-22. One of the gate time signals is selected by switch S1C and applied to one of the clock terminals of the dual J-K master-slave flip-flop. The output frequency of the Cycle Rate Multivibrator, as determined by the Cycle Rate Control, is connected to the other clock terminal and one clock input of an identical dual J-K flip-flop. The fourth clock input signal comes from the 10 kHz, Program Logic base frequency. Figure 3-6 illustrates how these clock inputs the flip-flops develop properly timed reset (R) and update (M) signals which are used by the Count and Display Logic, and precise duration gate signals to open and close the Main Gate. The signals for timing the events of reading, decoding, and displaying the input frequency are controlled by the J-K flip-flops. Figure 3-7 shows the timing of these events in relationship to each other. The actual time duration of each event depends on the Gate Time and Cycle Rate setting.

3-23. Count and Display Logic

3-24. Figure 3-8 shows a basic block diagram of the Count and Display Logic. The count input from the Main Gate, is applied to a high-speed BCD decade counter, capable of counting the 50 MHz direct input signal. The output of this high-speed counter drives the first display IC, and through a NAND gate drives the second, which is a count and display IC. Four additional count and display IC's are connected in series to complete the 6 digit display.

3-25. When the input count exceeds the display capability the output of the last count and display IC sets the overflow flip-flop. At the end of gate time the M signal from the Program Logic is inverted and applied to the Over Flow gates to energize the OF indicator. The M signal is also used to update the displayed information of each digit. Figure 3-9 shows the internal configuration of each count and display IC. The first display IC is different, in that it's BCD decade counter is separate. The M signal connected as shown, causes the quad latch to open and accept the count input information from the BCD decade counter. This count is displayed until the next cycle when a new input count is admitted by the M signal. At the end of every count and display cycle the Program Logic supplies an R signal to reset the BCD decade counter portion of each count and display IC, and reset the Over Flow flip-flop. At the completion of the reset signal the counter will start a new count and display cycle with the next gate time from the Program Logic.

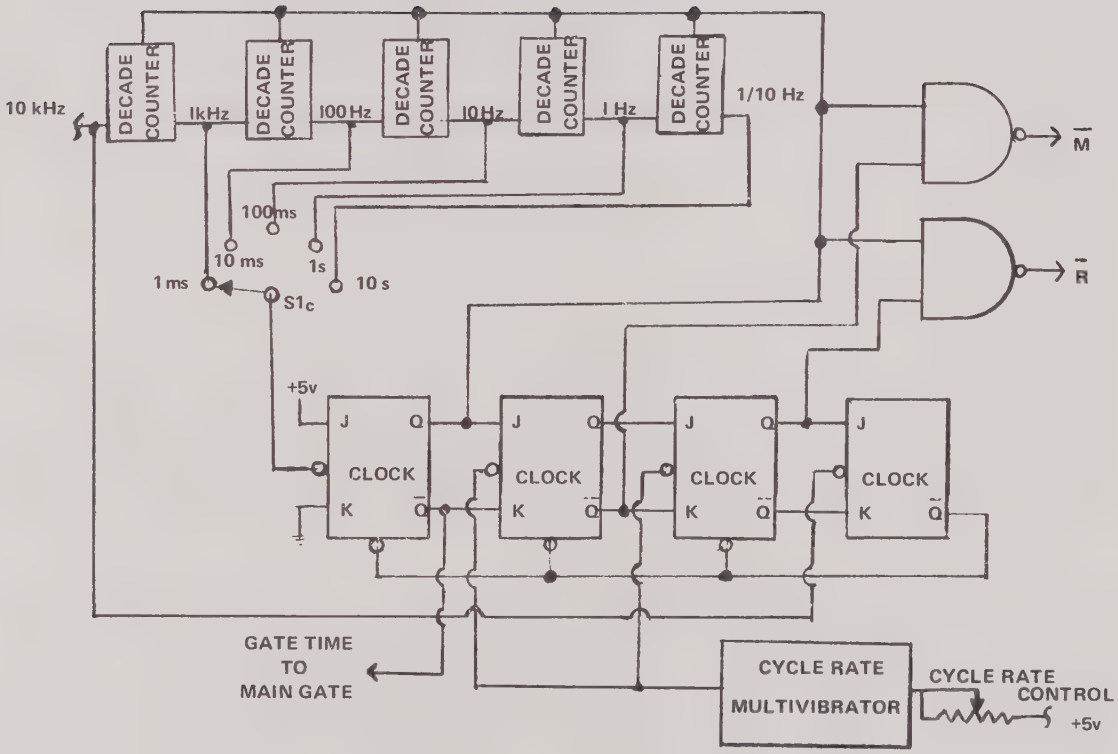

Figure 3-6. PROGRAM LOGIC

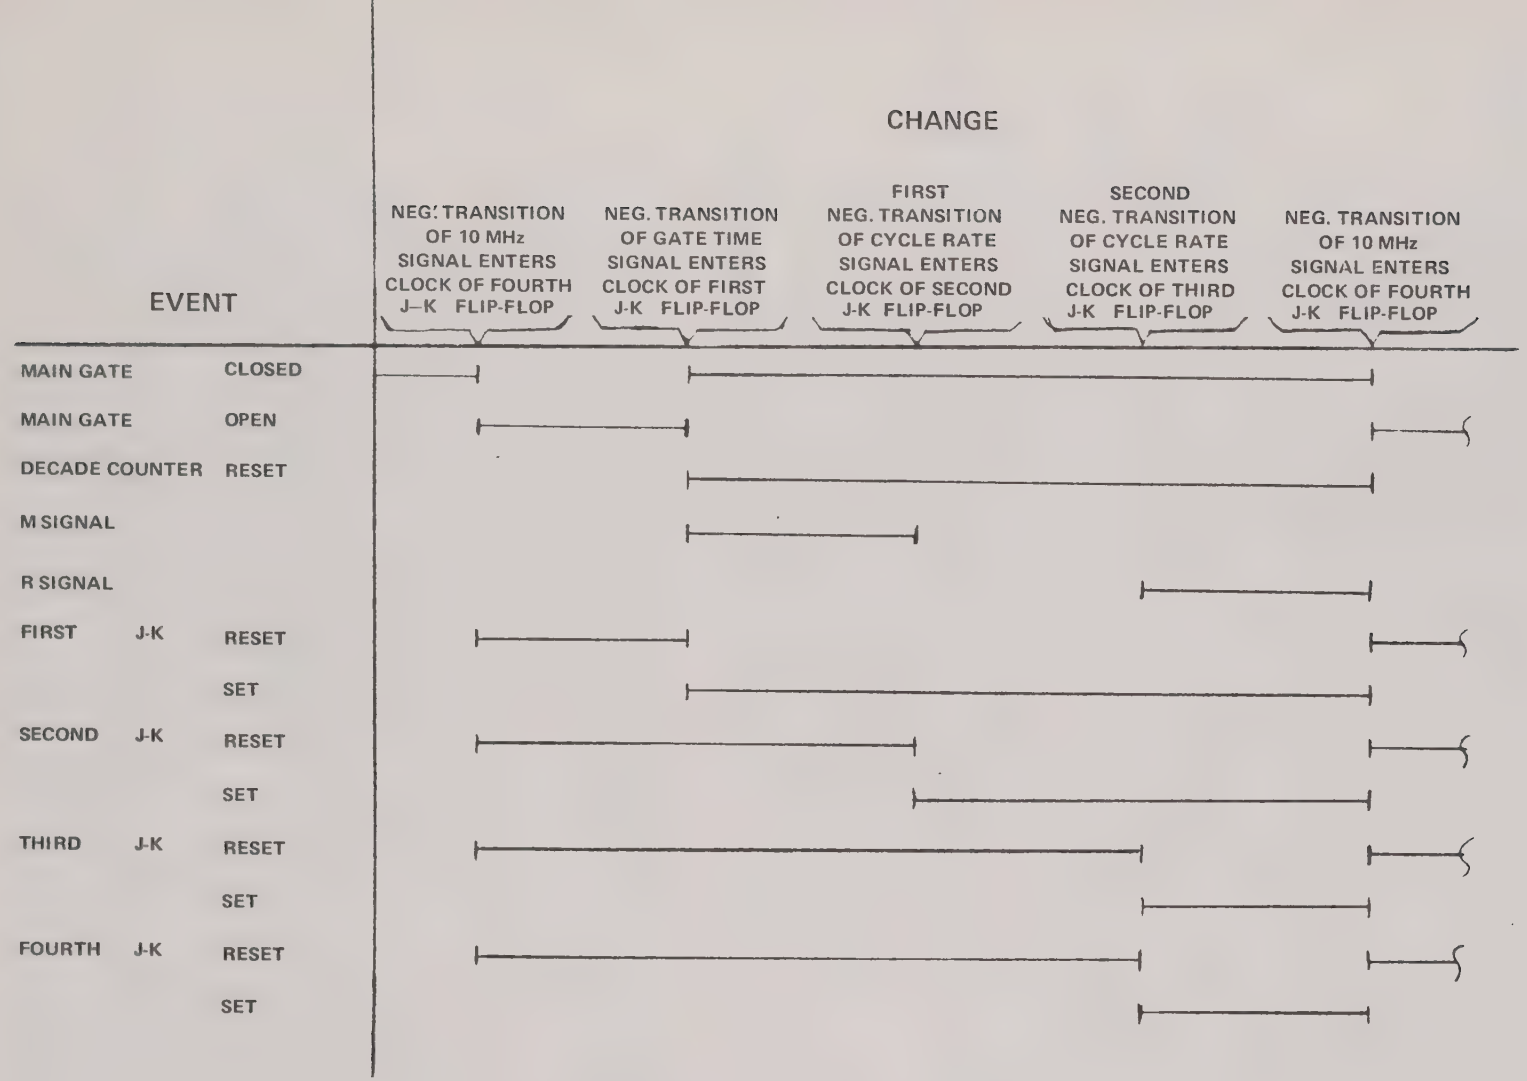
CHANGE
EVENT
NEG. TRANSITION OF 10 MHz SIGNAL ENTERS CLOCK OF FOURTH J-K FLIP-FLOP
NEG. TRANSITION OF GATE TIME SIGNAL ENTERS CLOCK OF FIRST J-K FLIP-FLOP
FIRST NEG. TRANSITION OF CYCLE RATE SIGNAL ENTERS CLOCK OF SECOND J-K FLIP-FLOP
SECOND NEG. TRANSITION OF CYCLE RATE SIGNAL ENTERS CLOCK OF THIRD J-K FLIP-FLOP
NEG. TRANSITION OF 10 MHz SIGNAL ENTERS CLOCK OF FOURTH J-K FLIP-FLOP
MAIN GATE CLOSED
MAIN GATE OPEN
DECADE COUNTER RESET
M SIGNAL
R SIGNAL
FIRST J-K RESET
SET
SECOND J-K RESET
SET
THIRD J-K RESET
SET
FOURTH J-K RESET
SET

Figure 3-7. PROGRAM LOGIC TIMING

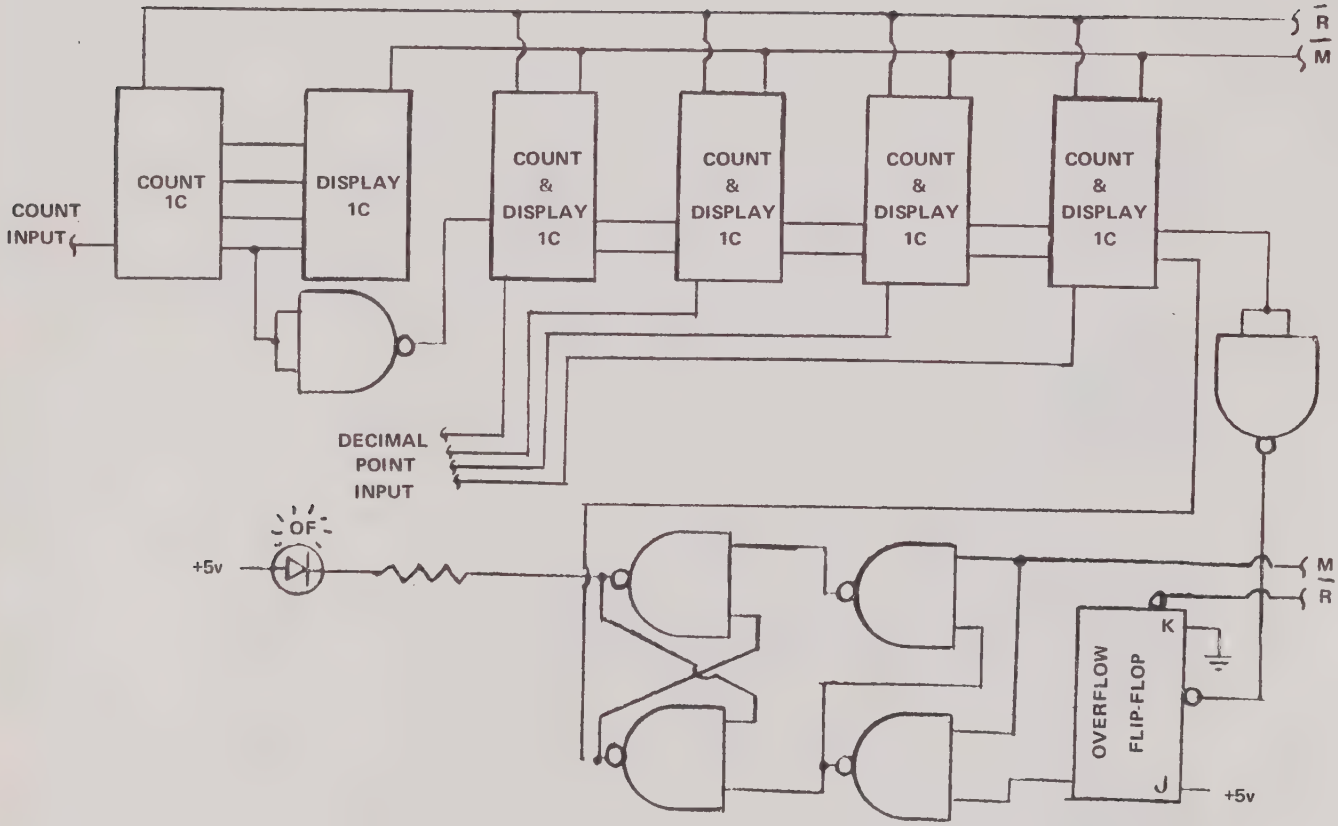

Figure 3-8. COUNT AND DISPLAY LOGIC

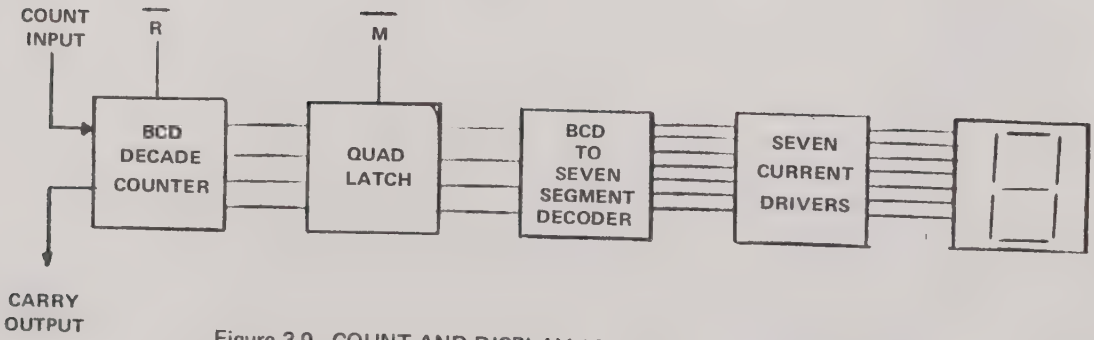

Figure 3-9. COUNT AND DISPLAY 1C INTERNAL CONFIGURATION

Section 4
MAINTENANCE

4-1. INTRODUCTION

4-2. This section contains information and instructions for preventive and corrective maintenance of the Model 1980A Digital Counter. The performance and calibration procedures, are designed to aid in maintaining instrument operation within specifications. Section 3 of this manual is important to the troubleshooting section, since a thorough knowledge of the theory of operation is indispensable in efficient troubleshooting. Maintenance and adjustment instructions, pertaining to Model 1980A options can be found in Section 6 of this manual.

4-3. TEST EQUIPMENT

4-4. The equipment recommended for performance testing, calibrating, and troubleshooting the Model 1980A is listed in Table 4-1. If this recommended equipment is not available, substitute equipment should meet or exceed the specifications of the recommended equipment.

TEST EQUIPMENT	RECOMMENDED MODEL
Frequency Synthesizer	Fluke Model 6160A
Oscilloscope	Tektronix Model 465
Voltmeter	Fluke Model 8000

4-5. PERFORMANCE TEST

4-6. It is recommended that the timebase frequency be checked 30 days after receiving the instrument, and every 90 days thereafter to ensure maximum measurement accuracy. The accuracy of the timebase oscillator can be checked using the following procedure:

a. Connect the Model 1980A to an AC line source and set the controls as follows:

CYCLE RATE	MIDRANGE
GATE TIME	10 ms
TRIGGER LEVEL	MIDRANGE

b. Connect an NBS traceable frequency standard, having an output frequency between 1.0 MHz and 50 MHz, to the input jack of the counter.

c. Adjust the TRIGGER LEVEL for even illumination of the "+ and −" status lights.

d. Increase the gate time until the value of the input frequency has been resolved to 0.1 Hz.

e. If the display reading on the Model 1980A is not within 2 digits of the known output of the frequency standard, the timebase oscillator must be adjusted. Refer to paragraph 4-7 for the oscillator adjustment procedure.

4-7. TIMEBASE ADJUST

4-8. When it becomes necessary to adjust the timebase oscillator it can be accurately set by one of two methods. The first method described should be used when an accurate frequency standard is available, and the alternate method may be used when a suitable frequency standard is not available or during field operation of the Model 1980A.

4-9. Timebase Adjustment Using a Frequency Standard

4-10. Before performing the following procedure insure that the frequency standard is up to operating temperature to insure proper accuracy of the timebase oscillator.

a. Connect the output of the frequency standard to the DIRECT (left) input jack of the counter.

b. Adjust the Model 1980A controls as follows:

CYCLE RATE	MIDRANGE
GATE TIME	10 ms
TRIGGER LEVEL	for even illumination of the "+ and –" status indicators

The counter will display the frequency standards output in MHz with display resolution to 1kHz.

c. Increase the gate time to 10s. The display will indicate the input in kHz, resolved to 0.1 Hz, and the Over Flow indicator will be illuminated.

d. Adjust the timebase oscillator frequency adjust, for a counter display within 0.1 Hz of the frequency standard's output frequency. The frequency adjust is located on the bottom of the timebase oscillator module.

4-11. Timebase Adjustment Using a Shortwave Receiver

4-12. This procedure requires the counter to be inclose proximity to the receiver antenna.

a. Remove the top and bottom covers of the 1980 counter (8 phillips screws)

b. Tune the SW receiver to the 10 MHz WWV broadcast. roadcast.

c. Bring the 1980 near enough to the SW receiver's antenna lead so that a zero beat note can be heard on the receiver speaker. If insufficient radiation is picked up from the counter, turn the timebase oscillator towards the antenna and move it in close.

d. Tune the 1980A's timebase oscillator adjust for a "zero beat" on the receiver. Look at the receiver's signal level meter, and adjust the timebase for an exact null. This will put the timebase oscillator output frequency within 1 Hz of the 10 MHz requirement.

Appendix A

Federal Supply Code for Manufacturers

A-1. CODE TO NAME

A-2. The following five digit code numbers are listed in numerical sequence along with the manufacturer's name and address to which the code has been assigned. The Federal Supply Code has been taken from Cataloging Handbook H 4-2, Code to Name.

00213 Sage Electronics Corp.
Rochester, New York

00327 Welwyn International, Inc.
Westlake, Ohio

00656 Aerovox Corp.
New Bedford, Massachusetts

00686 Film Capacitors
Passaic, New Jersey

00779 AMP Inc.
Harrisberg, Pennsylvania

01121 Allen-Bradley Co.
Milwaukee, Wisconsin

01281 TRW Semiconductors
Lawndale, California

01295 Texas Instruments, Inc.
Semiconductor Components Div.
Dallas, Texas

01686 RCL Electronics Inc.
Manchester, New Hampshire

01730 Deleted

01884 Dearborn Electronics Inc.
Orlando, Florida

02114 Ferroxcube Corp.
Saugerties, New York

02606 Replaced by 15801

02660 Amphenol-Borg Elect. Corp.
Broadview, Illinois

02799 Arco Capacitors, Inc.
Torrence, California

03508 General Electric Co.
Semiconductor Products
Syracuse, New York

03614 Replaced by 71400

03651 Replaced by 44655

03797 Eldema Corp.
Compton, California

03877 Transitron Electronic Corp.
Wakefield, Massachusetts

03888 Pyrofilm Resistor Co., Inc.
Cedar Knolls, New Jersey

03911 Clairex Corp.
New York, New York

03980 Muirhead Instruments, Inc.
Mountainside, New Jersey

04009 Arrow Hart and Hegemen
Electronic Company
Hartford, Connecticut

04062 Replaced by 72136

04202 Replaced by 81312

04217 Essex Wire Corp.
Wire & Cable Div.
Anaheim, California

04221 Aemco, Div. of
Midtex Inc.
Mankato, Minnesota

04222 Aerovox Corp. (H-Q)
Myrtle Beach, South Carolina

04645 Replaced by 75376

04713 Motorola Semiconductor Products Inc.
Phoenix, Arizona

05082 Replaced by 94154

05236 Jonathan Mfg. Co.
Fullerton, California

05277 Westinghouse Electric Corp.
Semiconductor Dept.
Youngwood, Pennsylvania

05278 Replaced by 43543

05397 Union Carbide Corp.
Electronics Div.
Cleveland, Ohio

05279 Southwest Machine & Plastic Co.
Los Angeles, California

05397 Union Carbide Corp.
Electronics Div.
New York, New York

05571 Sprague Electric Co.
Pacific Div.
Los Angeles, California

05574 Viking Industries
Chatsworth, California

05704 Alac, Inc.
Glendale, California

05820 Wakefield Engineering Ind.
Wakefield, Massachusetts

06001 General Electric Company
Capacitor Department
Irmo, South Carolina

06136 Replaced by 63743

06473 Amphenol Space & Missile Sys.
Chatsworth, California

06555 Beede Electrical Instrument Co.
Penacook, New Hampshire

06739 Electron Corp.
Littletown, Colorado

06743 Clevite Corp.
Cleveland, Ohio

06751 Semcor Div., Components, Inc.
Phoenix, Arizona

06860 Gould National Batteries Inc.
City of Industry, California

06980 Varian-Eimac
San Carlos, California

07115 Replaced by 14674

07138 Westinghouse Electric
Corp., Electronic
Tube Division
Elmira, New York

07256 Silicon Transistor Corp.
Garden City, New York

07263 Fairchild Semiconductor
Div. of Fairchild Camera
& Instrument Corp.
Mountain View, California

07344 Bircher Co., Inc.
Rochester, New York

07792 Lerma Engineering Corp.
Northampton, Massachusetts

07910 Teledyne Corp.
(Continental Device)
Hawthorne, California

08225 Industro Transistor Corp.
Long Island City, New York

08530 Reliance Mica Corp.
Brooklyn, New York

08792 Discontinued

08806 General Electric Co.
Miniature Lamp Dept.
Cleveland, Ohio

08863 Nylomatic Corp.
Norrisville, Pennsylvania

08988 Skottie Electronics Inc.
Archbald, Pennsylvania

09353 C and K Components
Watertown, Massachusetts

09423 Scientific Components, Inc.
Santa Barbara, California

09922 Burndy Corp.
Norwalk, Connecticut

11236 CTS of Berne
Berne, Indiana

11237 Chicago Telephone of
Calif., Inc. (CTC)
Paso Robles, California

11358 Discontinued

11403 Best Products Co
Chicago, Illinois

11503 Keystone Mfg.
Div. of Avis Industrial Corp.
Warren, Michigan

11726 Qualidyne Corp.
Santa Clara, California

12014 Chicago Rivet & Machine Co.
Bellwood, Illinois

12040 National Semiconductor Corp.
Danburry, Connecticut

12060 Diodes, Inc.
Chatsworth, California

12136 Philadelphia Handle Co.
Camden, New Jersey

12323 Presin Co., Inc.
Shelton, Connecticut

12327 Freeway Washer & Stamping Co.
Cleveland, Ohio

12400 Replaced by 75042

12617 Hamlin Inc.
Lake Mills, Wisconsin

12697 Clarostat Mfg. Co.
Dover, New Hampshire

12749 James Electronics
Chicago, Illinois

12856 Micrometals
Sierra Madre, California

12954 Dickson Electronics Corp.
Scottsdale, Arizona

12969 Unitrode Corp.
Watertown, Massachusetts

13103 Thermalloy Co.
Dallas, Texas

13511 Amphenol Corp.
Los Gatos, California

13606 Sprague Electric Co.
Transistor Div.
Concord, New Hampshire

13839 Replaced by 23732

14099 Semtech Corp.
Newbury Park, California

14193 California Resistor Corp.
Santa Monica, California

14298 American Components, Inc.
Conshohocken, Pennsylvania

14655 Cornell-Dubilier Electronics
Newark, New Jersey

14674 Discontinued, see 16299

14752 Electro Cube Inc.
San Gabriel, California

14869 Replaced by 96853

15636 Elec-Trol Inc.
Northridge, California

15801 Fenwal Electronics Inc.
Framingham, Massachusetts

15818 Amelco Semiconductor
Div. of Teledyne Inc.
Mountain View, California

15849 USI CO. Inc.
Mt. Vernon, New York

15898 International Business
Machines (IBM)
Essex Junction, Vermont

15909 Replaced by 17870

16299 Corning Glass
Raleigh, North Carolina

16332 Replaced by 28478

16473 Cambridge Scientific Ind. Inc.
Cambridge, Maryland

16742 Paramount Plastics
Downey, California

16758 Delco Radio
Div. of General Motors
Kokomo, Indiana

17001 ITT Cannon
Santa Ana, California

17069 Circuit Structures Lab.
Upland, California

17856 Siliconix, Inc.
Sunnyvale, California

17870 Daven-Div of Thomas A. Edison
Ind. – McGraw - Edison Co.
Manchester, New Hampshire

18083 Deleted

18178 Vactec Inc.
Maryland Heights, Missouri

18612 Vishay Intertechnology
Inc.
Malvern, Pennsylvania

18736 Voltronics Corp.
Hanover, New Jersey

19429 Discontinued, use 89536

19451 Perine Machinery & Supply Co.
Seattle, Washington

19701 Electra Mfg. Co.
Independence, Kansas

20584 Enochs Mfg. Co.
Indianapolis, Indiana

20891 Self-Organizing Systems,
Inc.
Dallas, Texas

22767 ITT Semiconductors
Div. of ITT
Palo Alto, California

23050 Product Comp. Corp.
Mount Vernon, New York

23732 Tracor
Rockville, Maryland

23880 Stanford Applied Engrng.
Santa Clara, California

23936 Pamotor Div., Wm. J. Purdy Co.
Burlingame, California

24248 Southco
Div. of South Chester Corp.
Lester, Pennsylvania

24655 General Radio Co.
West Concord, Massachusetts

24759 Lenox-Fugle Electronics
Plainfield, New Jersey

25403 Amperex Electronic Corp.
Semiconductor & Receiving
Tube Division
Slatersville, Rhode Island

27014 National
Semiconductor
Corp.
Santa Clara, California

27264 Molex Products
Downers Grove, Illinois

28425 Bohannon Industries
Fort Worth, Texas

28478 Deltrol Controls.
Corp.
Milwaukee, Wisconsin

28480 Hewlett Packard
Co.
Palo Alto, California

28520 Heyman Mfg. Co.
Kenilworth, New Jersey

29083 Monsanto, Co., Inc.
Santa Clara, California

30323 Illinois Tool
Works, Inc.
Chicago, Illinois

32539 Mura Corp.
Great Neck, New York

32767 Griffith Plastic
Products Co.
Burlingame, California

32879 Advanced Mechanical
Components
Northridge, California

32897 Erie Technological
Products, Incorporated
Frequency Control Div.
Carlisle, Pennsylvania

33173 General Electric
Co., Tube Dept.
Owensboro, Kentucky

34333 Silicon General
Westminster, California

34335 Advanced Micro
Devices.
Sunnyvale, California

37942 Mallory, P. R. & Co., Inc.
Indianapolis, Indiana

42498 National Company
Melrose, Massachusetts

43543 Nytronics Inc.
Transformer Co. Div.
Alpha, New Jersey

44655 Ohmite Mfg. Co.
Skokie, Illinois

49671 Radio Corp. of America
New York, New York

49956 Raytheon Company
Lexington, Maine

53021 Sanamo Electric Co.
Springfield, Illinois

55026 Simpson Electric Company
Chicago, Illinois

56289 Sprague Electric Co.
North Adams, Massachusetts

58474 Superior Electric Co.
Bristol, Connecticut

60399 Torrington Mfg. Co.
Torrington, Connecticut

62460 Deleted

63743 Ward Leonard Electric Co.
Mount Vernon, New York

64834 West Mfg. Co.
San Francisco, California

65092 Weston Instruments Inc.
Newark, New Jersey

66150 Winslow Tele-Tronics Inc.
Asbury Park, New Jersey

70563 Amperite Company
Union City, New Jersey

70903 Belden Mfg. Co.
Chicago, Illinois

71002 Birnbach Radio Co., Inc.
New York, New York

71236 "ELMENCO"
Willimantic, Connecticut

71400 Bussmann Mfg.
Div. of McGraw - Edison Co.
Saint Louis, Missouri

71450 CTS Corp.
Elkhart, Indiana

71468 ITT Cannon Electric Inc.
Los Angeles, California

71482 Clare, C. P. & Co.
Chicago, Illinois

71590 Centralab
Div. of Globe Union Inc.
Milwaukee, Wisconsin

71707 Coto Coil Co., Inc.
Providence, Rhode Island

71744 Chicago Miniature Lamp Works
Chicago, Illinois

71785 Cinch Mfg. Co. & Howard
B. Jones Div.
Chicago, Illinois

72005 Driver, Wilber B., Co.
Newark, New Jersey

72092 Replaced by 06980

72136 Electro Motive Mfg. Co.
Willimantic, Connecticut

72259 Nytronics Inc.
Berkeley Heights, New Jersey

72354 Deleted

72619 Dialight Corp.
Brooklyn, New York

72653 G. C. Electronics
Rockford, Illinois

72665 Replaced by 90303

72794 Dzus Fastener Co., Inc.
West Islip, New York

72928 Gudeman Co. (Gulton
Industries)
Chicago, Illinois

72982 Erie Tech. Products Inc.
Erie, Pennsylvania

73138 Beckman Instruments Inc.
Helipot Division
Fullerton, California

73293 Hughes Aircraft Co.
Electron Dynamics Div.
Torrence, California

73445 Amperex Electronic Corp.
Hicksville, New York

73559 Carling Electric Inc.
Hartford, Connecticut

73586 Circle F Industries
Trenton, New Jersey

73734 Federal Screw Products, Inc.
Chicago, Illinois

73743 Fischer Special Mfg. Co.
Cincinnati, Ohio

73899 JFD Electronics Co.
Brooklyn, New York

73949 Guardian Electric Mfg. Co
Chicago, Illinois

74199 Quam Nichols Co.
Chicago, Illinois

74217 Radio Switch Corp.
Marlboro, New Jersey

74276 Signalite Inc.
Neptune, New Jersey

74306 Piezo Crystal Co.
Carlisle, Pennsylvania

74542 Hoyt Elect. Instr. Works
Penacook, New Hampshire

74970 Johnson, E. F., Co.
Waseca, Minnesota

75042 IRC Inc. (Div. of TRW)
Philadelphia, Pennsylvania

75376 Kurz-Kasch, Inc.
Dayton, Ohio

75382 Kulka Electric Corp.
Mount Vernon, New York

75915 Littlefuse Inc.
Des Plaines, Illinois

76854 Oak Mfg. Co.
Crystal Lake, Illinois

77342 Potter & Brumfield
Div. of Amer. Machine & Foundry
Princeton, Indiana

77969 Rubbercraft Corp. of Calif. LTD.
Torrance, California

78189 Shakeproof
Div. of Illinois Tool Works
Elgin, Illinois

78277 Sigma Instruments, Inc.
South Braintree, Massachusetts

78488 Stackpole Carbon Co.
Saint Marys, Pennsylvania

78553 Tinnerman Products
Cleveland, Ohio

79136 Waldes Kohinoor Inc.
Long Island City, New York

79497 Western Rubber Company
Goshen, Indiana

79963 Zierick Mfg. Corp.
New Rochelle, New York

80031 Mepco
Div. of Sessions Clock Co.
Morristown, New Jersey

80145 API Instruments Co.
Chesterland, Ohio

80183 Sprague Products
North Adams, Massachusetts

80294 Bourns Inc.
Riverside, California

80583 Hammarlund Co., Inc.
Mars Hill, North Carolina

80640 Stevens, Arnold Inc.
Boston, Massachusetts

81073 Grayhill Inc.
La Grange, Illinois

81590 Korry Mfg. Co.
Seattle, Washington

81312 Winchester Electronics
Div. of Litton Industries
Oakville, Connecticut

81439 Therm-O-Disc Inc.
Mansfield, Ohio

81483 International Rectifier Corp.
Los Angeles, California

81741 Chicago Lock Corp.
Chicago, Illinois

82305 Palmer Electronics
South Gate, California 90280

82389 Switchcraft Inc.
Chicago, Illinois

82415 Price Electric Corp.
Frederick, Maryland

82872 Roanwell Corp.
New York, New York

82877 Rotron Mfg. Co., Inc.
Woodstock, New York

82879 ITT Wire & Cable Div.
Pawtucket, Rhode Island

83003 Varo Inc.
Garland, Texas

83298 Bendix Corp.
Electric Power Division
Eatontown, New Jersey

83330 Smith, Herman H., Inc.
Brooklyn, New York

83478 Rubbercraft Corp. of America
New Haven, Connecticut

83594 Burroughs Corp.
Electronic Components Div.
Plainfield, New Jersey

83740 Union Carbide Corp.
Consumer Products Div.
New York, New York

84171 Arco Electronics, Inc.
Great Neck, New York

84411 TRW
Ogallala, Nebraska

86577 Precision Metal Products
Stoneham, Massachusetts

86684 Radio Corp. of America
Electronic Components & Devices
Harrison, New Jersey

86689 Deleted

87034 Marco-Oak Inc.
Anaheim, California

88245 Litton Products Inc.
Van Nuys, California

88419 Use 14655

88690 Replaced by 04217

89536 Fluke, John Mfg. Co., Inc.
Seattle, Washington

89730 Replaced by 08806

90201 Mallory Capacitor Co.
Indianapolis, Indiana

90215 Best Stamp & Mfg. Co
Kansas City, Missouri

90211 Square D Co.
Chicago, Illinois

90303 Mallory Battery Co.
Tarrytown, New York

91293 Johanson Mfg. Co.
Boonton, New Jersey

91407 Replaced by 58474

91502 Associated Machine
Santa Clara, California

91506 Augat
Attleboro, Mass.

91637 Dale Electronics Inc.
Columbus, Nebraska

91662 Elco Corp.
Willow Grove, Pennsylvania

91737 Gremar Mfg Co., Inc. (ITT)
Woburn, Massachusetts

91802 Industrial Devices, Inc.
Edgewater, New Jersey

91836 King's Electronics
Tuckahoe, New York

91929 Honeywell Inc.
Micro Switch Div.
Freeport, Illinois

91934 Miller Electric Co., Inc.
Pawtucket, Rhode Island

93332 Sylvania Electric Products
Semiconductor Products Div
Woburn, Massachusetts

94145 Replaced by 49956

94154 Turg-Sol
Div. of Wagner Electric Corp.
Newark, New Jersey

95146 Alco Electronics Products Inc.
Lawrence, Massachusetts

95263 Leecraft Mfg. Co.
Long Island City, New York

95264 Replaced by 98278

95275 Vitramon Inc.
Bridgeport, Connecticut

95303 Radio Corp. of America
Solid State & Receiving Tube Div.
Cincinnati, Ohio

95354 Methode Mfg. Corp.
Rolling Meadows, Illinois

95712 Dage Electric Co., Inc.
Franklin, Indiana

95987 Weckesser Co. Inc.
Chicago, Illinois

96733 San Fernando Electric Mfg. Co.
San Fernando, California

96853 Rustrak Instrument Co.
Manchester, New Hampshire

96881 Thomson Industries, Inc.
Manhasset, New York

97540 Master Mobile Mounts
Div. of Whitehall Electronics Corp.
Los Angeles, California

97913 Industrial Electronic Hdware Corp.
New York, New York

97945 White, S. S. Co.
Plastics Div.
New York, New York

97966 Replaced by 11358

98094 Replaced by 49956

98159 Rubber-Teck, Inc.
Gardena, California

98278 Microdot Inc.
Pasadena, California

98291 Sealectro Corp.
Conhex Div.
Mamaroneck, New York

98388 Accurate Rubber & Plastics
Culver City, California

98743 Replaced by 12749

98925 Deleted

99120 Plastic Capacitors, Inc.
Chicago, Illinois

99217 Southern Electronics Corp.
Burbank, California

99392 STM
Oakland, California

99515 Marshall Industries
Capacitor Div
Monrovia, California

99779 Barnes Corp.
Lansdowne, Pennsylvania

Toyo Electronics
(R-Ohm Corp.)
Irvine, California 92664

National Connector
Minneapolis, Minn. 55436

Appendix B

List of Abbreviations

alternating current	ac
ampere	A
assembly	assy
binary coded decimal	bcd
bel	B
capacitor	cap
centimeter	cm
ceramic	cer
clockwise	cw
common-mode rejection ratio	cmrr
composition	comp
counterclockwise	ccw
decibel	dB
degree Celsius	°C
degree Fahrenheit	°F
digital voltmeter	dvm
direct current	dc
electrolytic	elect
external	ext
farad	F
field effect transistor	FET
germanium	Ge
giga (10^9)	G
gigahertz	GHz
ground	gnd
guard	gd
henry	H
hertz	Hz
high frequency	hg
hour	h
inch	in
integrated circuit	IC
intermediate frequency	if
internal	intl
kilo (10^3)	k
kilohertz	kHz
kilohm	kΩ
kilovolt	kV
low frequency	lf
maximum	max
mega (10^6)	M
megahertz	MHz
megohm	MΩ
meter	m
micro (10^{-6})	μ
microsecond	μs
milli (10^{-3})	m
milliamperes	mA
millimeter	mm
millisecond	ms
millivolt	mV
minimum	min
nano (10^{-9})	n
nanosecond	ns
negative	neg
ohm	Ω
oscilloscope	scope
parts per million	ppm
peak-to-peak	p-p
pico (10^{-12})	p
picofarad	pF
plus or minus	±
positive	pos
plastic	plstc
printed circuit board	pcb
radio frequency	rf
root mean square	rms
second (time)	s
serial number	SN
silicon	Si
tantalum	Ta
temperature coefficient	TC
tera (10^{12})	T
transformer	xfmr
transistor	xstr
ultra high frequency	uhf
variable	var
very high frequency	vhf
very low frequency	vlf
volt	V
voltage controlled oscillator	vco
watt	W
wirewound	ww

Appendix C

Sales Representatives

ALABAMA

HUNTSVILLE
BCS Associates, Inc.
3322 S. Memorial Parkway
P.O. Box 1273
Tel. (205) 881-6220
Zip 35801

ALASKA

SEATTLE
Showalter-Judd, Inc.
5616 4th Ave. South
Tel. (206) 762-2310
Zip 98108

ARIZONA

PHOENIX
Barnhill Associates
7329 E. Stetson Dr.
Tel. (602) 947-7841
Scottsdale, AZ 85251

CALIFORNIA

LOS ANGELES
Instrument Specialists, Inc.
1109 S. Central Ave.
Glendale, California 91204
Tel. (213) 245-9404

SANTA CLARA
Instrument Specialists, Inc.
2359 De La Cruz Blvd.
Tel. (408) 244-1505
Zip 95050

SAN DIEGO
Instrument Specialists, Inc.
4805 Mercury St., Ste. 1
Tel. (714) 565-2555
Zip 92111

COLORADO

DENVER
Barnhill Associates
1170 S. Sheridan Blvd.
Tel. (303) 934-5505
Zip 80226

CONNECTICUT

HARTFORD
Instrument Representatives, Inc.
P.O. Box 165
Glastonbury, Connecticut 06033
Tel. (203) 633-0777

FLORIDA

ORLANDO
BCS Associates, Inc.
940 N. Fern Creek Ave.
Tel. (305) 896-4881
Zip 32803

HAWAII

HONOLULU
Industrial Electronics, Inc.
646 Queen Street
P.O. Box 135
Tel. (808) 533-6095
Zip 96817

ILLINOIS

CHICAGO
Cozzens & Cudahy, Inc.
1301 N. Rand Rd.
Des Plaines, IL 60016
Tel. (312) 298-3600

INDIANA

INDIANAPOLIS
Cozzens & Cudahy, Inc.
Port O'Call Executive Ctr.
21 Beachway Drive
Tel. (317) 244-2456
Zip 46224

MARYLAND

BALTIMORE
Electronic Marketing Assoc. Inc.
11501 Huff Court
Kensington, Maryland 20795
Tel. (301) 881-5300, 744-7700

MASSACHUSETTS

BOSTON
Instrument Representatives, Inc.
109 Massachusetts Ave.
Lexington, MA 02173
Tel. (617) 861-8620

MICHIGAN

DETROIT
WKM Associates, Inc.
1474 East Outer Dr.
Tel. (313) 892-2500
Zip 48234

MINNESOTA

MINNEAPOLIS
Cozzens & Cudahy, Inc.
10800 Lyndale Ave. S.
Tel. (612) 884-4336
Zip 55420

MISSOURI

ST. LOUIS
Cozzens & Cudahy, Inc.
P.O. Box 10013
Lambert Field - Zip 63145
Tel. (314) 423-1234

NEW JERSEY

NEWARK
SBM Representatives
1519 Stuyvesant Avenue
Union, New Jersey 07083
Tel. (201) 687-8737

NEW MEXICO

ALBUQUERQUE
Barnhill Associates
1410 — D Wyoming N.E.
Tel. (505) 299-7658
Zip 87112

NEW YORK

NEW YORK
SBM Representatives
28 Hobby Street
Pleasantville, N.Y. 10570
Tel. (914) 769-1811

ROCHESTER
SBM Representatives
4515 Culver Rd.
Tel. (716) 226-1400
Zip 14622

NORTH CAROLINA

GREENSBORO
P.O. Box 9619
1310 Beahan Pl.
Tel. (919) 273-1918
Zip 27408

OHIO

CLEVELAND
WKM Associates, Inc.
16141 Puritas Ave.
Tel. (216) 267-0445
Zip 44135

DAYTON
WKM Associates, Inc.
6073 Far Hills Ave.
Tel. (513) 434-7500
Zip 45459

PENNSYLVANIA

PHILADELPHIA
Electronic Marketing Assoc.
210 Goddard Blvd., Ste. 100
King of Prussia, Pennsylvania
Tel. (215) 248-5050
Zip 19406

PITTSBURGH
WKM Associates, Inc.
90 Clairton Blvd.
Tel. (412) 892-2953
Zip 15236

TEXAS

DALLAS
Barnhill Associates
Suite 220
312 N. Central Express Wy.
Richardson, Texas 75080
Tel. (214) 231-2573

HOUSTON
Barnhill Associates
Suite 332
3810 Westheimer
Tel. (713) 621-0040
Zip 77027

WASHINGTON

SEATTLE
Showalter-Judd, Inc.
5616 4th Ave. South
Tel. (206) 762-2310
Zip 98108

CANADA

BRITISH COLUMBIA

VANCOUVER
Allan Crawford Associates, Ltd.
1820 Pandora St.
Tel. (604) 253-7136

ALBERTA

CALGARY
Allan Crawford Associates, Ltd.
640 - 11th Ave. S.W.
Tel. (403) 261-0780

ONTARIO

MALTON
Allan Crawford Associates, Ltd.
6427 Northam Drive
Tel. (416) 678-1500

OTTAWA, 3
Allan Crawford Associates, Ltd.
376 Churchill Ave., Suite 106
Tel. (613) 829-9651

QUEBEC

LONGUEUIL
Allan Crawford Associates, Ltd.
157 (rue) St. Charles Street W.
Tel. (514) 670-1212

INTERNATIONAL REPRESENTATIVES

ARGENTINA
Coasin S.A.
Virrey del Pino 4071
Buenos Aires, Argentina

AUSTRALIA
Elmeasco Instruments
P.O. Box 334
Brookvale, N.S.W. Australia 2100

AUSTRIA
Kontron GMBH & Co., Kg.
Lederergasse 16
1080 Vienna, Austria

BELGIUM
C.N. Rood S.A.
37 Place de Jamblinne de Meux
1040 Brussels, Belgium

BRAZIL
Ambriex S.A.
Rue Ceara, 104 - 2.º e 3.º Andares
ZC - 29
Rio de Janeiro GB, Brazil

Ambriex S.A.
Rua Tupi, 535
01233 Sao Paulo SP, Brazil

CARIBBEAN
West Indies Sales Co.
606 Calle Aboy
San Juan, Puerto Rico 00907

CHILE
Coasin Chile Ltd.
Casilla 14588 - Correo 15
Santiago, Chile

CHINA, Peoples Republic Of
May Lee Industries, Inc.
475 Park Avenue South
New York, N.Y. 10016

COLOMBIA
Marones Ltda.
Apartado Aereo 90687
Bogota 8, Colombia

DENMARK
Tage Olsen A/S
1, Rønnegade
Copenhagen Ø, Denmark

ECUADOR
Proteco Coasin Cia., Ltda.
Apartado 228A
Quito, Ecuador

FINLAND
Oy Findip AB
P.O. Box 25
00521 Helsinki 52, Finland

FRANCE
M.B. Electroniques S.A.
29, Rue Emile Duclaux
92, Suresnes
France

GERMANY
Fey Elektronische Messgerate
8 Muenchen 19
Horemansstrasse 28
West Germany

GREECE
Marios Dalleggio Representations
2 Alopekis Street
Athens 19 Greece

HONG KONG & MACAU
Gilman & Co., Ltd.
P.O. Box 56
Hong Kong

INDIA
Hinditron Services Pvt. Ltd.
69/A Nepean Sea Road
Bombay-6 India

IRAN
Berkeh Company Ltd.
20 Salm Road, Roosevelt Ave.
Tehran, Iran

ISRAEL
R.D.T. Electronics Engineering Ltd.
19 Prof. Shor Street
Tel-Aviv, Israel

ITALY
Sistrel S.P.A.
Via Giorgio da Sebenico 11-13
Rome, Italy

JAPAN
Toyo Trading Co. Ltd.
P.O. Box 5014
Tokyo International
Tokyo 100-31, Japan

Suzuki Bldg.
2-38 Junkeicho-dori
Minami-ku, Osaka

KOREA
Asia Science & Co.
Internaltion P.O. Box 1250
Seoul, Korea

MALAYSIA
O'Connor's (Pte) Ltd.
P.O. Box 1197
Kota Kinabalu
East Malaysia

P.O. Box 91
Petaling Jaya, Selangor
West Malaysia

MEXICO
Mexitek, S.A.
Eugenia 408
Departments 1 y 5
Mexico 12, D.F.
Mexico

THE NETHERLANDS
C.N. Rood B.V.
13 - Cort van der Lindenstraat
Rijswijk (Z.H.) 2100
Netherlands

Fluke (Nederland) B.V.
Ledeboerstraat 27
Industrieterrein Noord
Tilburg, Netherlands

NEW ZEALAND
David J. Reid (N.Z.) Ltd.
C.P.O Box 2630
Auckland 1, New Zealand

NIGERIA
Deemtee Electrotechnics Ltd.
P.O. Box 3073
Lagos, Nigeria

NORWAY
Morgenstierne & Co. A/S
P.O. Box 6688 Rodeløkka
Oslo 5, Norway

PAKISTAN
Pak International Operations
505 Muhammadi House-McLeod Rd.
P.O. Box 5323
Karachi, Pakistan

PERU
Importaciones y Representaciones
Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru

PORTUGAL
Equipamentos De Laboratorio, Lda.
P.O. Box 1100
Lisbon, Portugal

SINGAPORE
O'Connor's (Pte) Ltd.
98 Pasir Panjang Road
Singapore 5, Singapore

SOUTH AFRICA
K. Baker Associates (Pty) Ltd.
P.O. Box 1257
Johannesburg
Republic of South Africa

P.O. Box 3641
Cape Town

SPAIN
Ataio Ingenieros S.A.
Enrique-Larretta 12
Madrid 16, Spain

SWEDEN
Teleinstrument AB
P.O. Box 490
S-16204 Vallingby
Sweden

SWITZERLAND
Kontron Electronic A.G.
Bernerstrasse Sud 169
8048 Zurich
Switzerland

TAIWAN-REPUBLIC OF CHINA
Heighten Trading Company, Ltd.
P.O. Box 1408
Taipei, Taiwan 104

THAILAND
G. Simon Radio Ltd.
30 Patpong Avenue
Suriwong
Bangkok, Thailand

THE UNITED KINGDOM
Fluke International Corp.
Garnett Close
Watford, WD2 4TT
England

URUGUAY
Coasin Uruguay S.A.
Cerrito 617 - 4º Piso
Montevideo, Uruguay

U.S.S.R.
Codevintec Pacific Inc.
6263 Variel
Woodland Hills, Calif. 91364

VENEZUELA
Coasin C.A.
Apdo. Postal 50939
Sabana Grande No.1
Caracas 105
Venezuela

In Europe, contact FLUKE NEDERLAND, B.V., POST OFFICE BOX 5053, INDUSTRIETERREIN NOORD, TILBURG, THE NETHERLANDS

FLUKE REGIONAL SERVICE CENTER; THE NETHERLANDS

FLUKE (NEDERLAND) B.V.
P.O. BOX 5053
TILBURG, THE NETHERLANDS

FLUKE REGIONAL SERVICE CENTER, UNITED KINGDOM

FLUKE INTERNATIONAL CORP.
GARNETT CLOSE
WATFORD, WD24TT
ENGLAND

AUTHORIZED SERVICE LABORATORIES INTERNATIONAL

EACH INTERNATIONAL REPRESENTATIVE IS EQUIPPED WITH AN AUTHORIZED SERVICE LABORATORY. PLEASE REFER TO THE INTERNATIONAL REPRESENTATIVE LISTING FOR YOUR SERVICE NEEDS.

www.manualsplus.com
1034339